


a. CONNECTOR INFORMATION

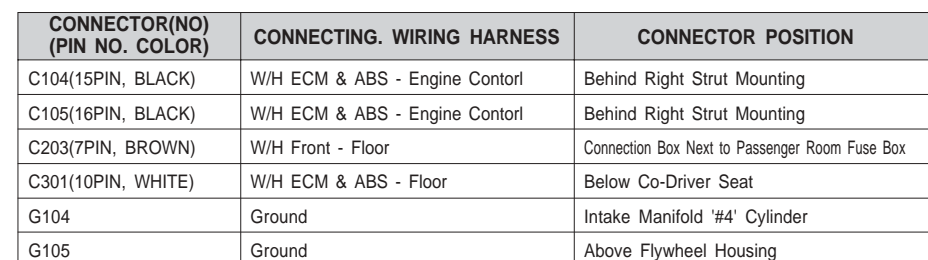

A

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----

B

ECM(CONNECTOR: RED)

C

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----

D

ECM(CONNECTOR: WHITE)

EI SYSTEM

D	C	B	A
---	---	---	---

CKP

1	2	3
---	---	---

C104

1	2			
3	4	5	6	7
8	9	10		
11	12	13	14	15

W/H ENGINE CONTROL

C105

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16

W/H ECM & ABS

C203



1	2	3	
4	5	6	7

W/H FRONT

C301


1	2	3	4		
5	6	7	8	9	10

W/H FLOOR

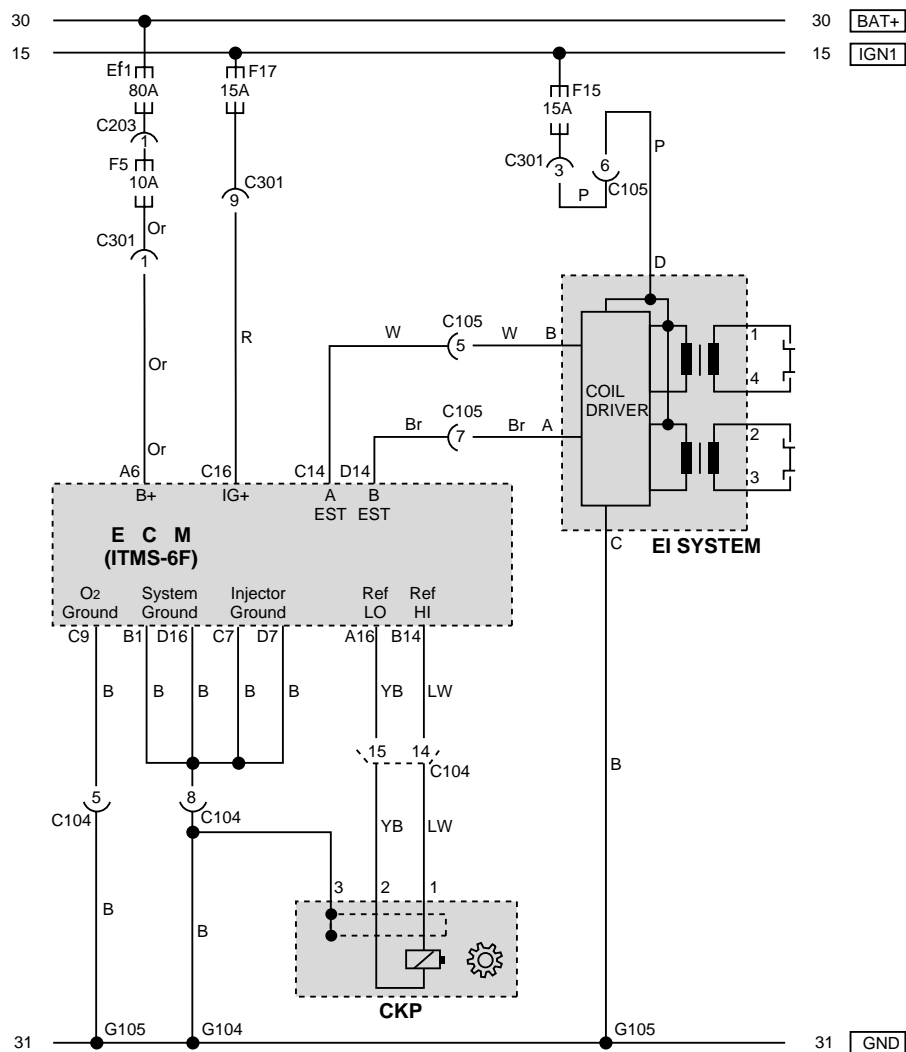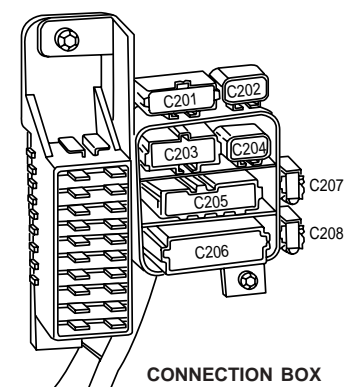


c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

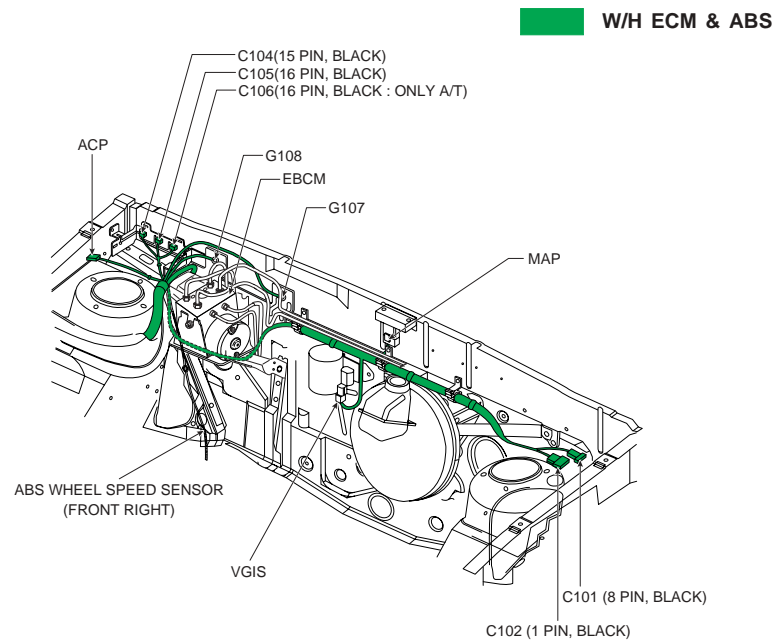


• FLOOR PANEL

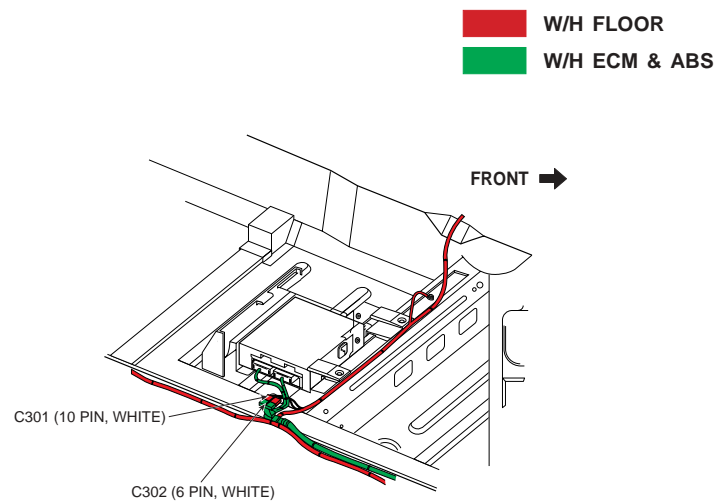

• DOHC ENGINE

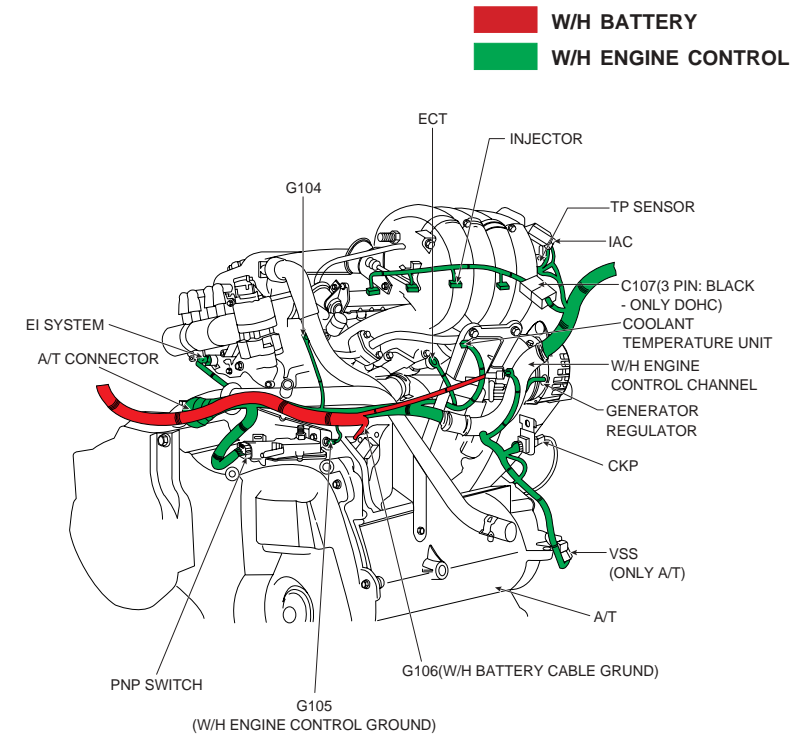




2) FUEL PUMP, INJECTOR, O₂ SENSOR CIRCUIT - ITMS-6F
2-1) W/AIR CONDITIONER (UNLEADED) - LHD

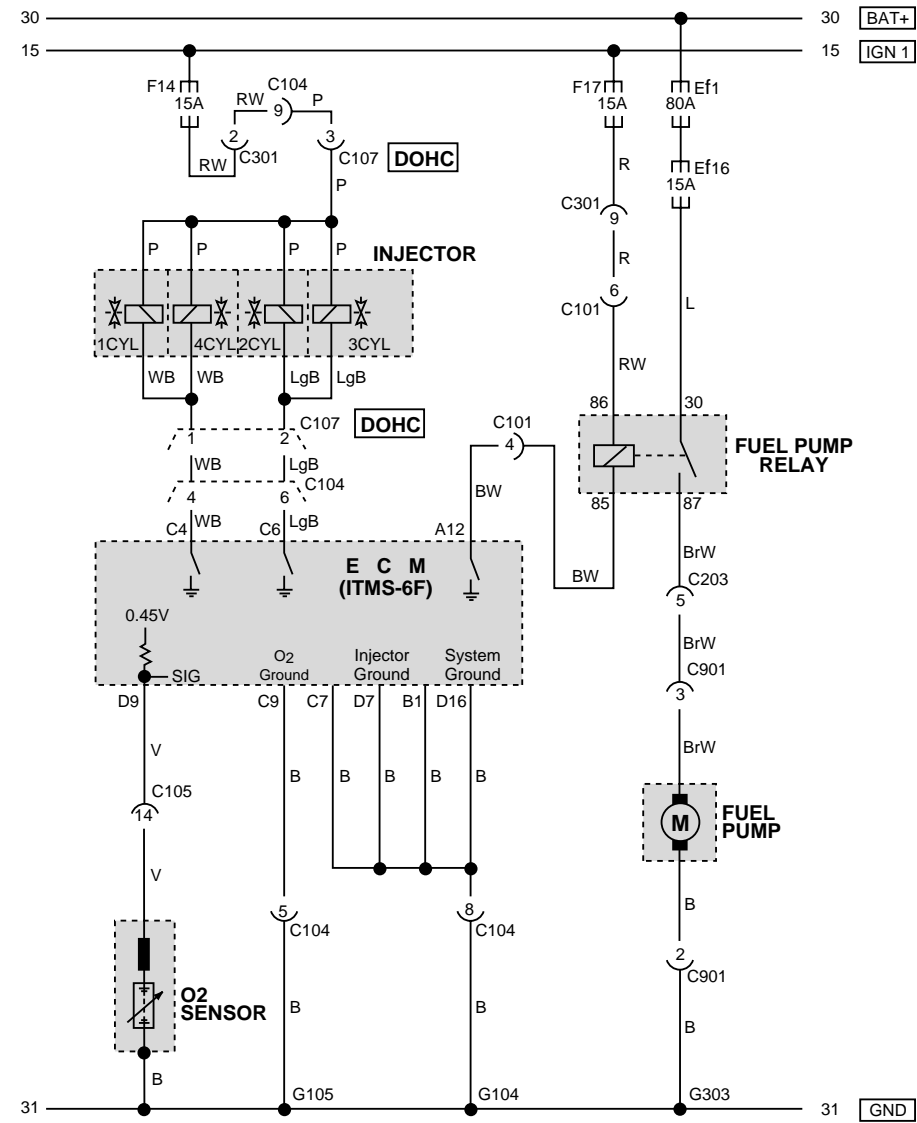

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101(6PIN, BLACK)	W/H ECM & ABS - Front	Below Engine Coolant Surge Tank
C104(15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C107(3PIN, BLACK)	W/H Engine Control - Injector(DOHC)	Below Throttle Valve Body
C203(7PIN, BROWN)	W/H Front - Floor	Connection Box Next To Passenger Room Fuse Box
C301(10PIN, WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
C901(6PIN, BLACK)	W/H Floor - Fuel Tank	Behind Fuel Tank
G104	Ground	Intake Manifold '4' Cylinder
G105	Ground	Above Flywheel Housing
G303	Ground	Below Co-Driver Seat


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

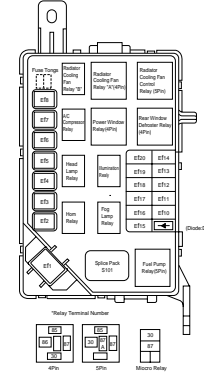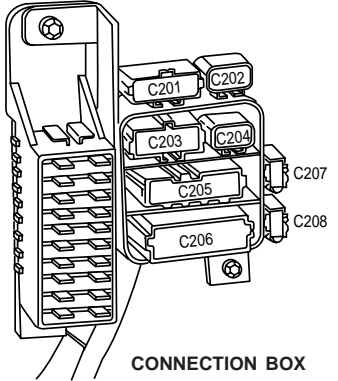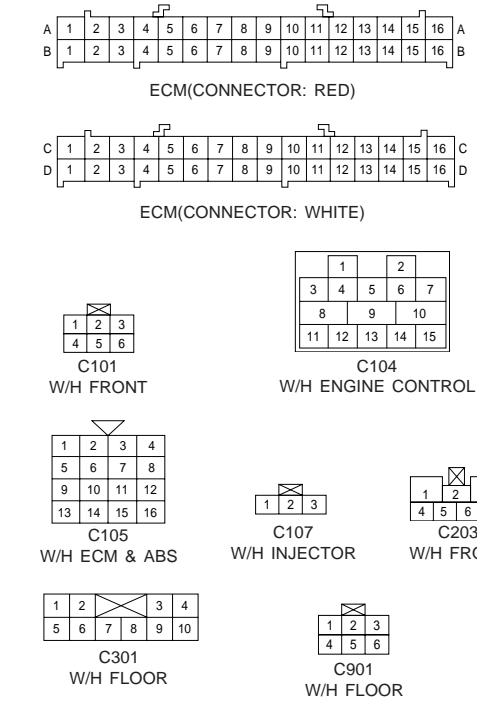


ENGINE ROOM FUSE BOX

c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

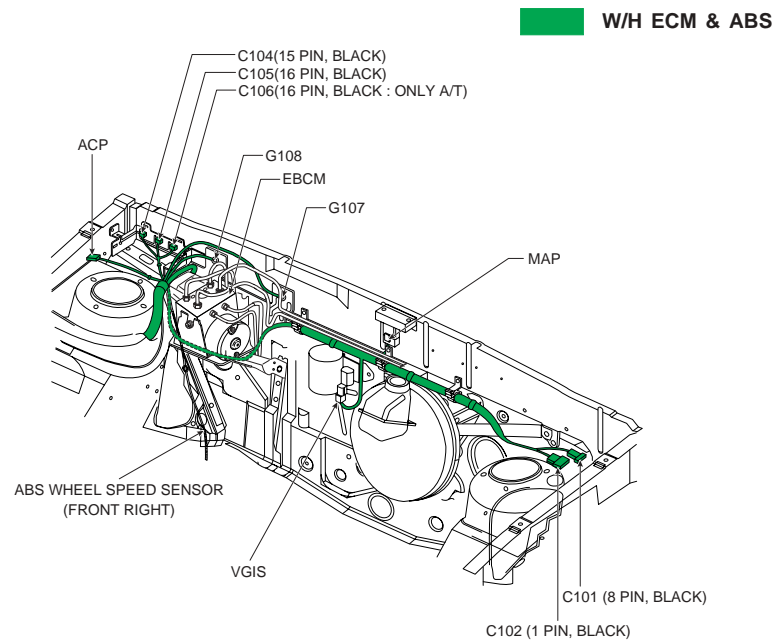


• FLOOR PANEL

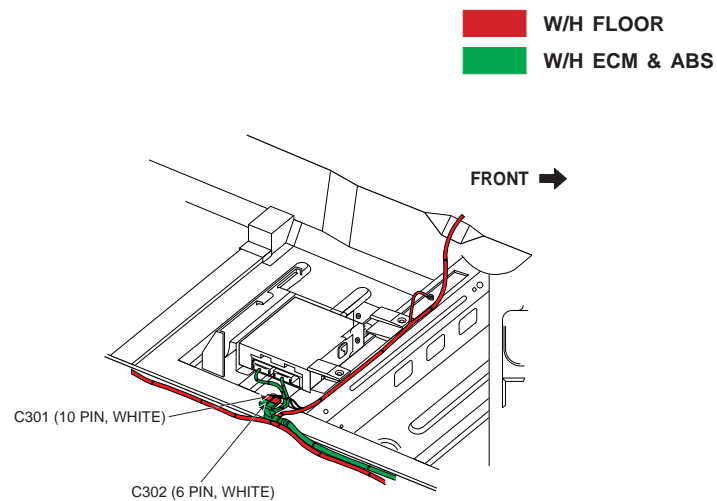


• UNDER BODY

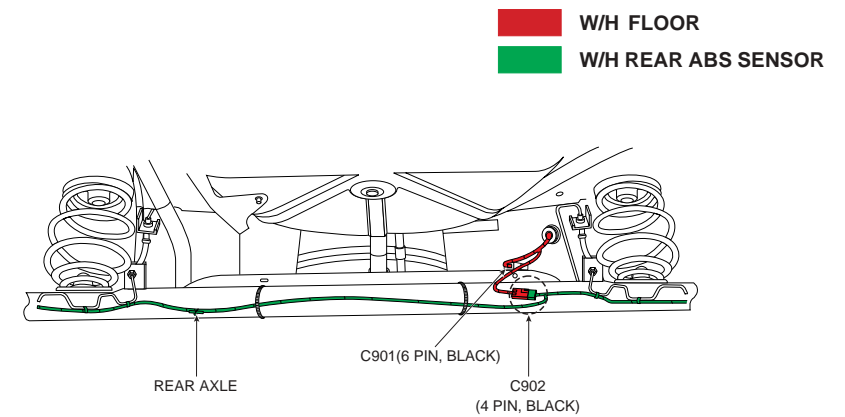

• DOHC ENGINE

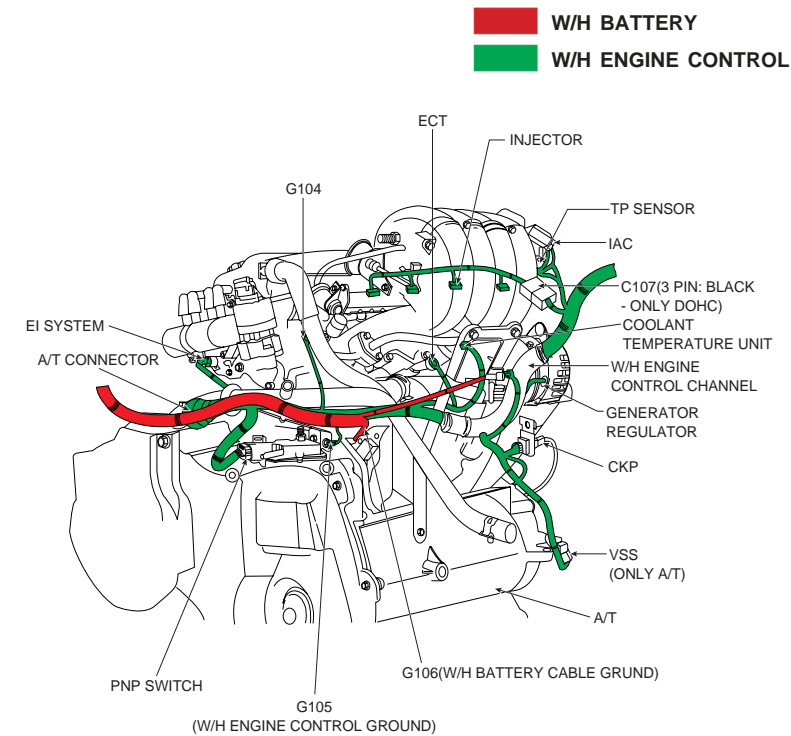




2-2) W/O AIR CONDITIONER (UNLEADED) - LHD

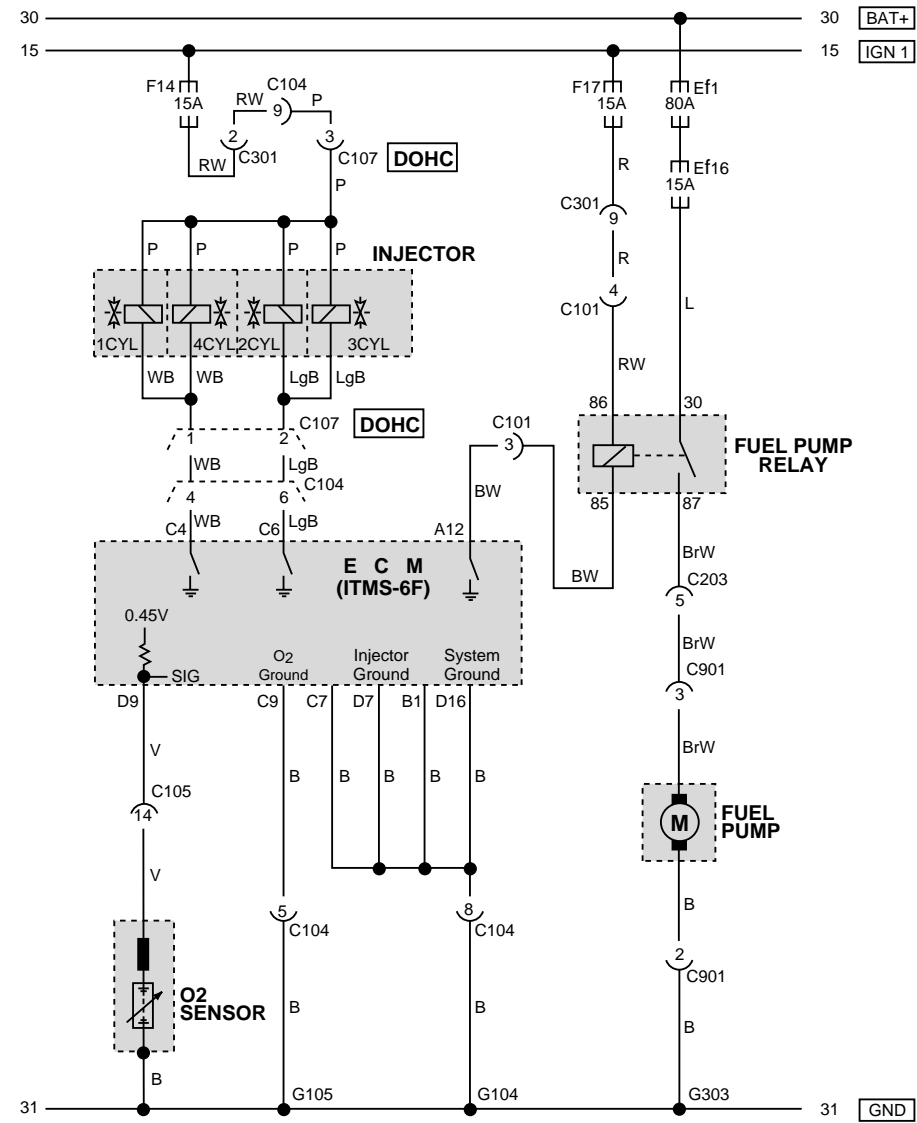

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101(4PIN, BLACK)	W/H ECM & ABS - Front	Below Engine Coolant Surge Tank
C104(15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C107(3PIN, BLACK)	W/H Engine Control - Injector(DOHC)	Below Throttle Valve Body
C203(7PIN, BROWN)	W/H Front - Floor	Connection Box Next To Passenger Room Fuse Box
C301(10PIN, WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
C901(6PIN, BLACK)	W/H Floor - Fuel Tank	Behind Fuel Tank
G104	Ground	Intake Manifold '4' Cylinder
G105	Ground	Above Flywheel Housing
G303	Ground	Below Co-Driver Seat


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

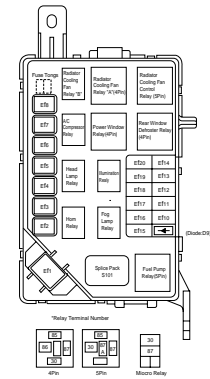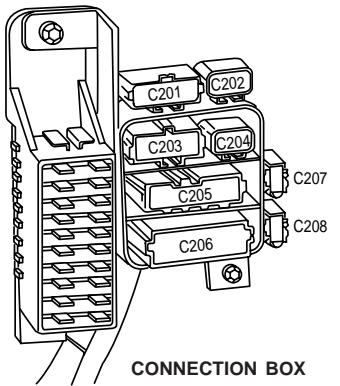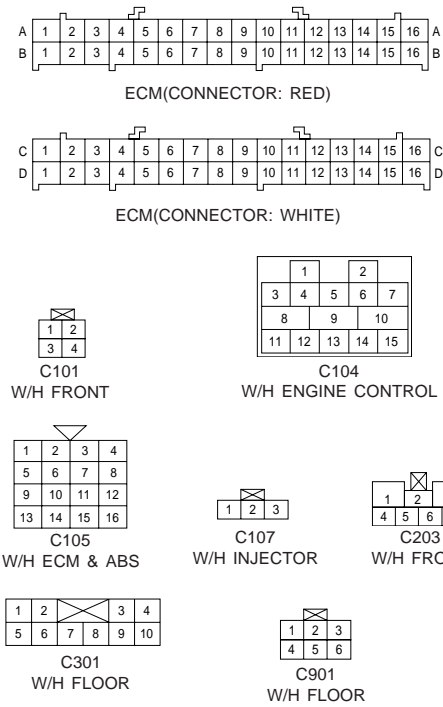


ENGINE ROOM FUSE BOX

c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

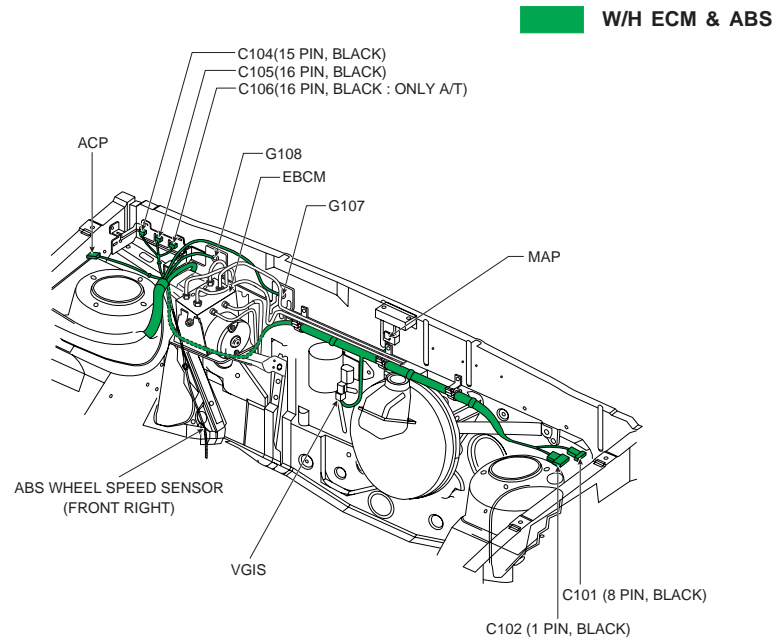


• FLOOR PANEL

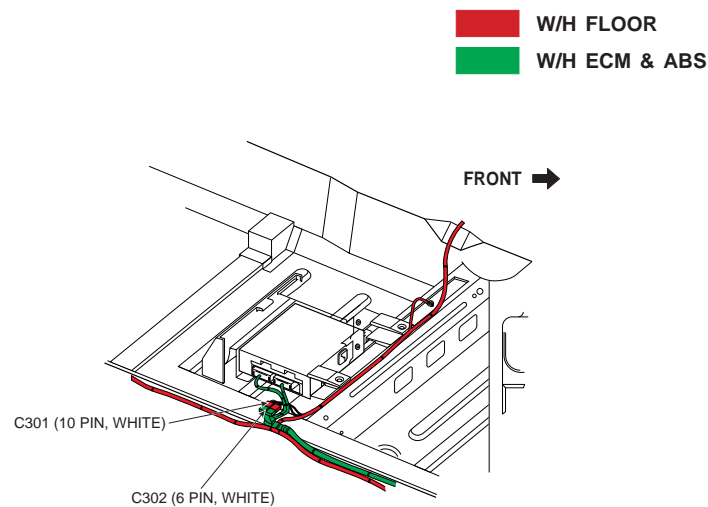


• UNDER BODY

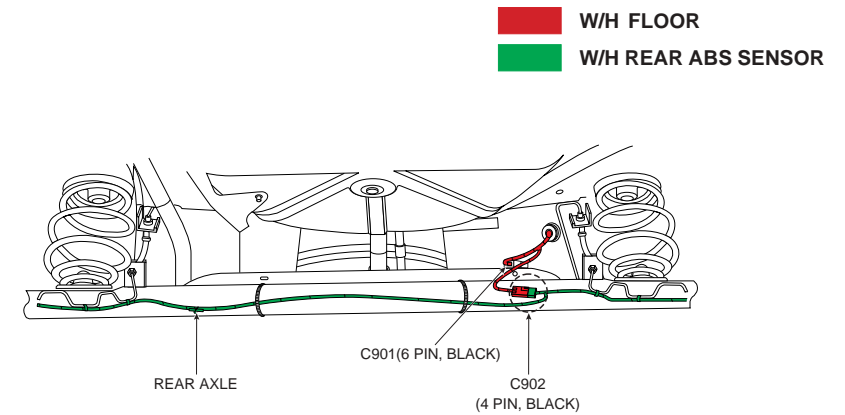

• DOHC ENGINE

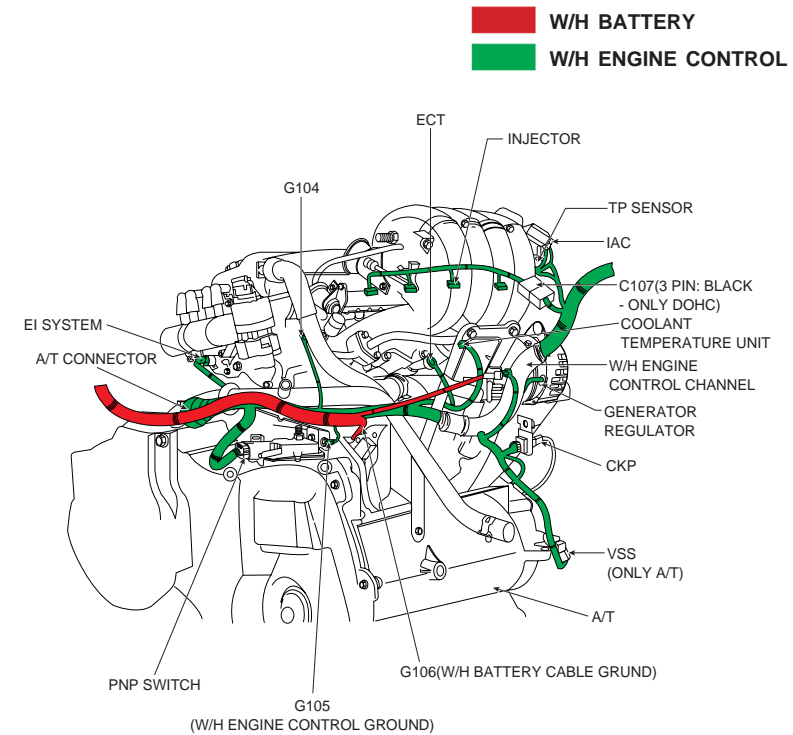


2-3) RHD (UNLEADED)

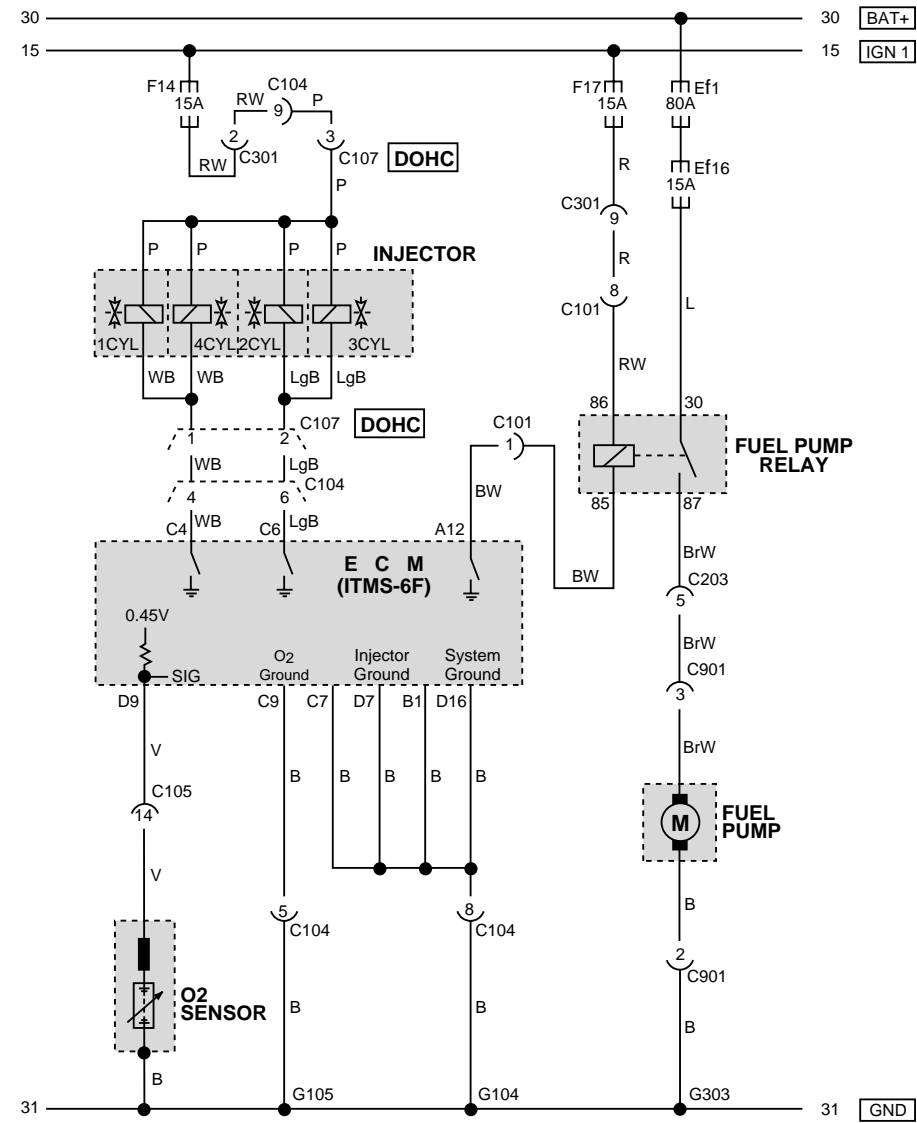

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101(8PIN, BLACK)	W/H ECM & ABS - Front	Below Engine Coolant Surge Tank
C104(15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C107(3PIN, BLACK)	W/H Engine Control - Injector(DOHC)	Below Throttle Valve Body
C203(7PIN, BROWN)	W/H Front - Floor	Connection Box Next To Passenger Room Fuse Box
C301(10PIN, WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
C901(6PIN, BLACK)	W/H Floor - Fuel Tank	Behind Fuel Tank
G104	Ground	Intake Manifold '4' Cylinder
G105	Ground	Above Flywheel Housing
G303	Ground	Below Co-Driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

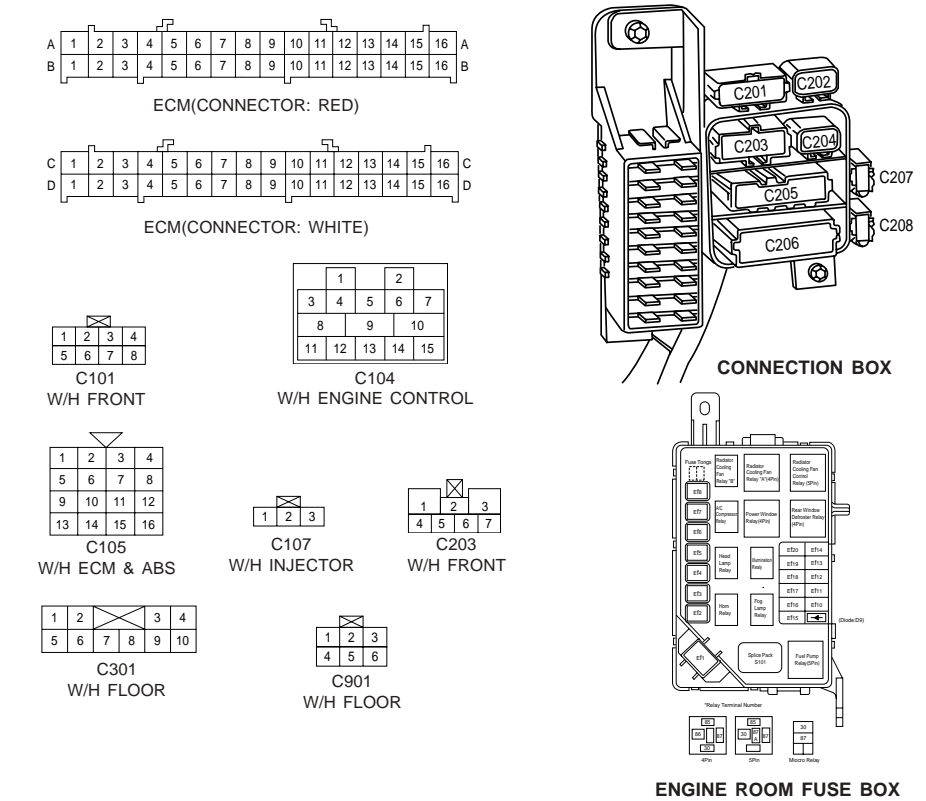


c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

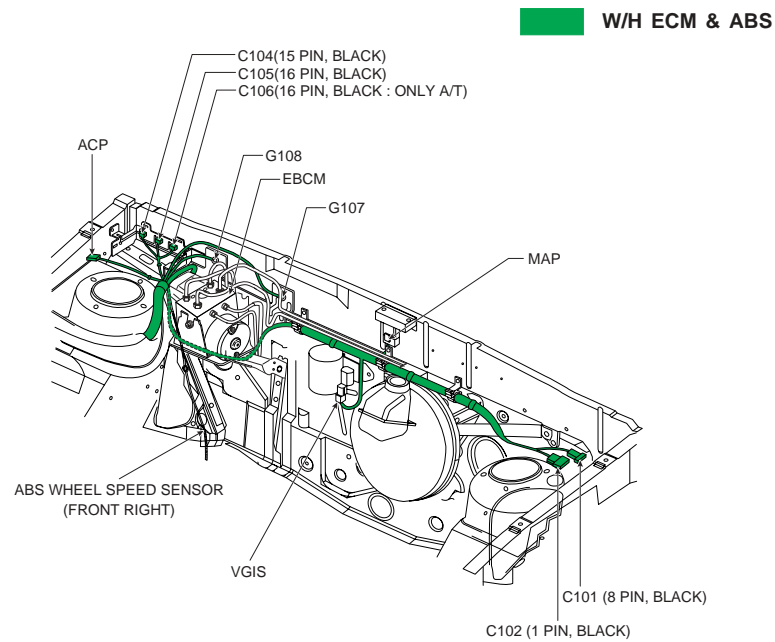


• FLOOR PANEL

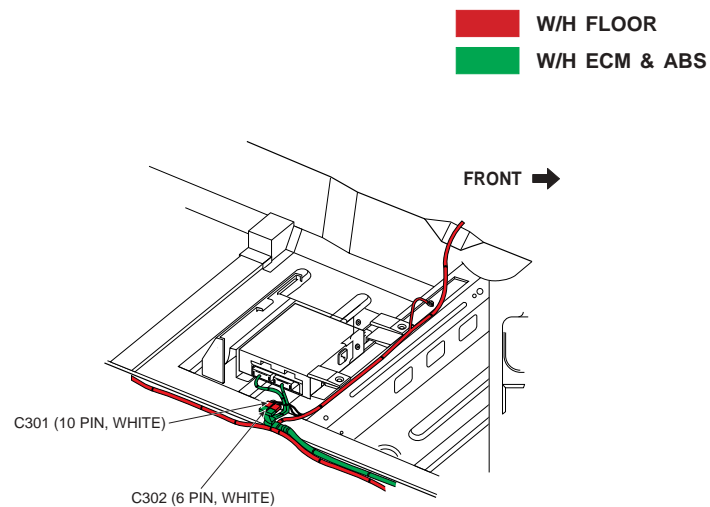


• UNDER BODY

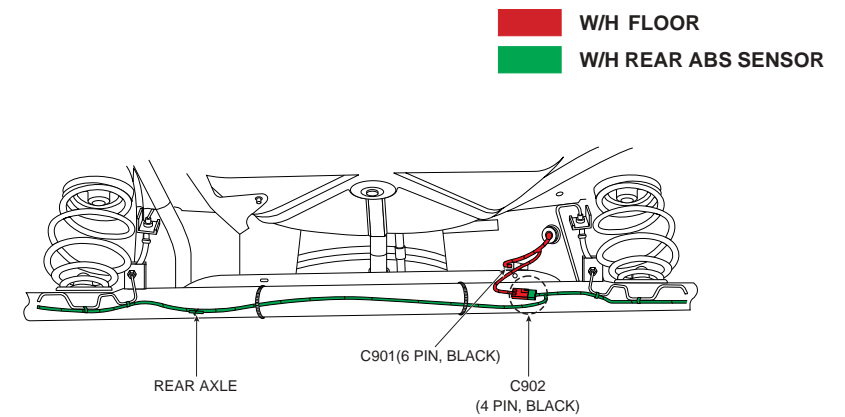

• DOHC ENGINE

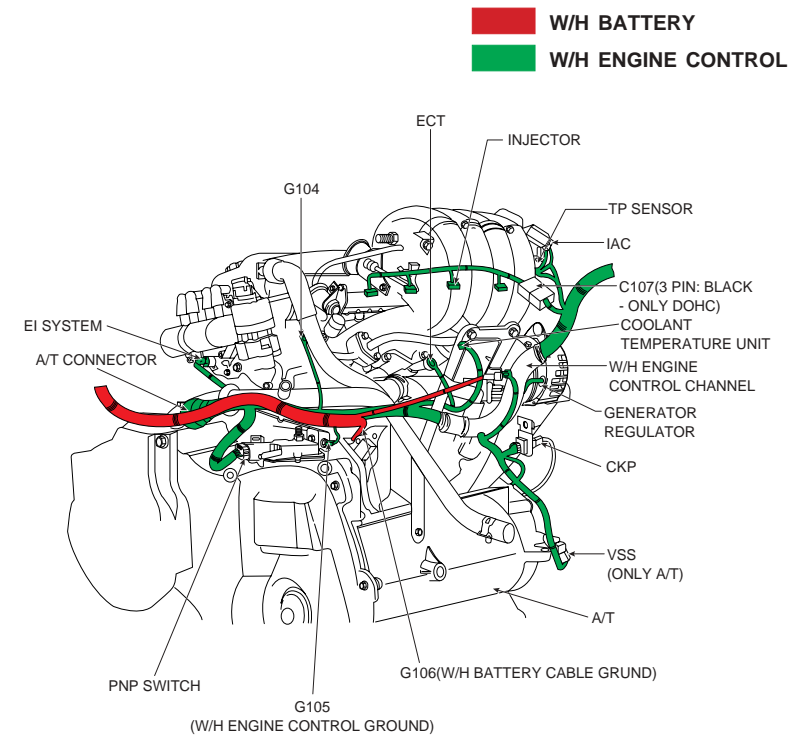




3) FUEL PUMP, INJECTOR, CO POTENTIOMETER CIRCUIT - ITMS-6F
3-1) W/AIR CONDITIONER (LEADED) - LHD

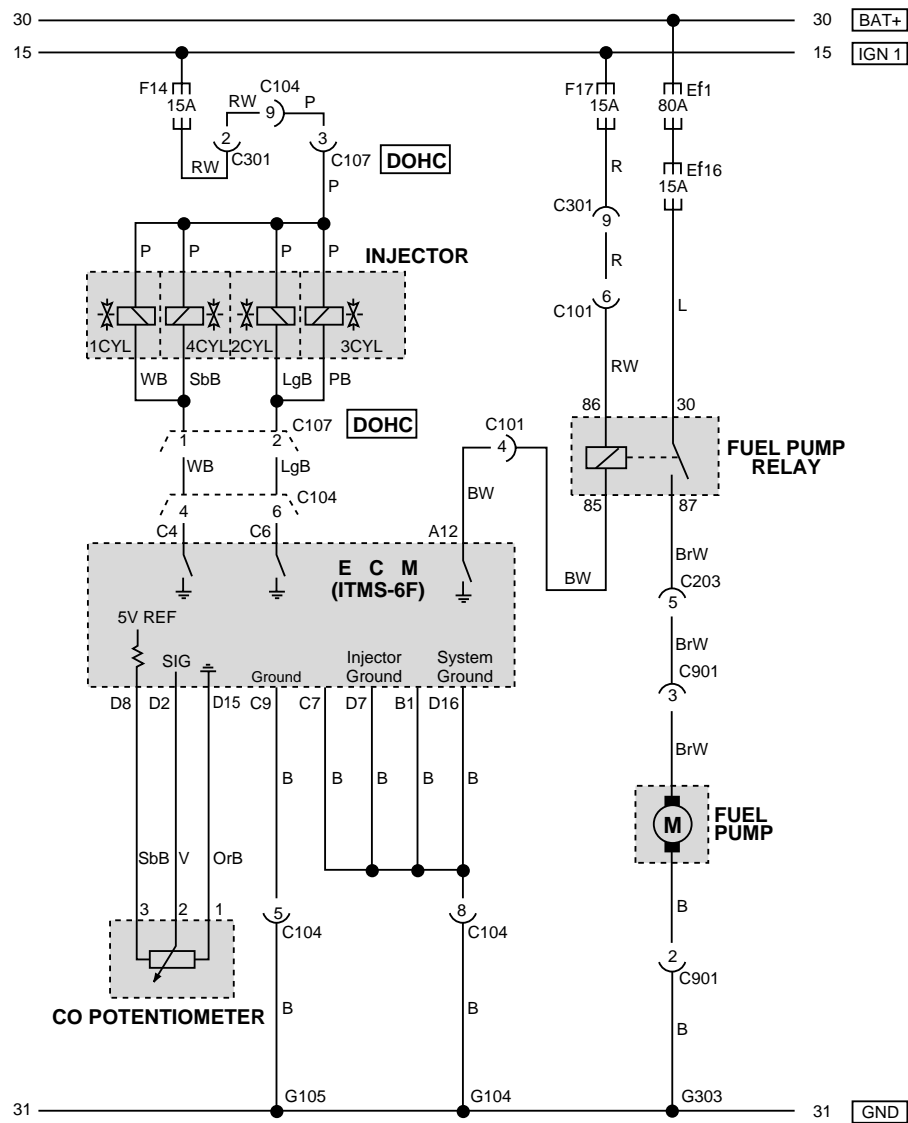

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101(6PIN, BLACK)	W/H ECM & ABS - Front	Below Engine Coolant Surge Tank
C104(15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C107(3PIN, BLACK)	W/H Engine Control - Injector(DOHC)	Below Throttle Valve Body
C203(7PIN, BROWN)	W/H Front - Floor	Connection Box Next To Passenger Room Fuse Box
C301(10PIN, WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
C901(6PIN, BLACK)	W/H Floor - Fuel Tank	Behind Fuel Tank
G104	Ground	Intake Manifold '4' Cylinder
G105	Ground	Above Flywheel Housing
G303	Ground	Below Co-Driver Seat


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

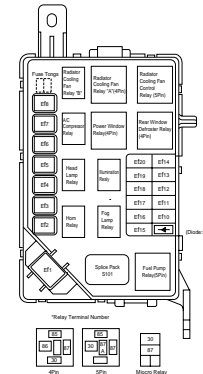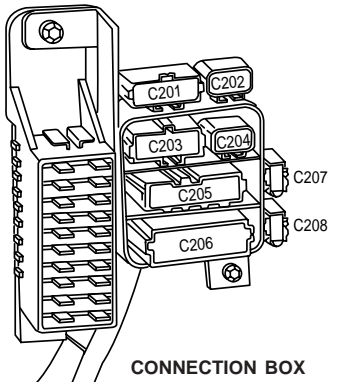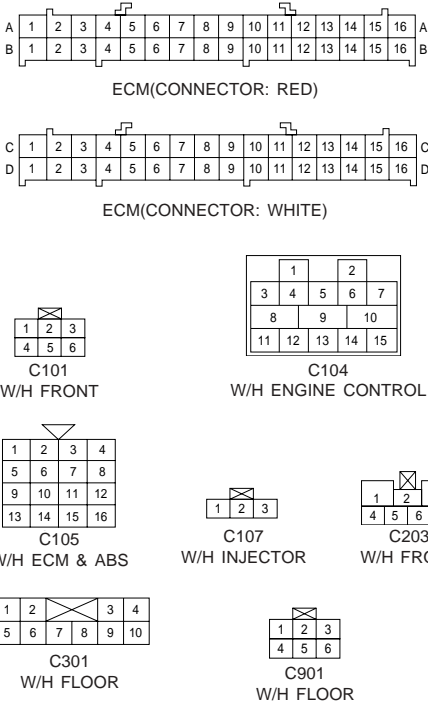


ENGINE ROOM FUSE BOX

c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

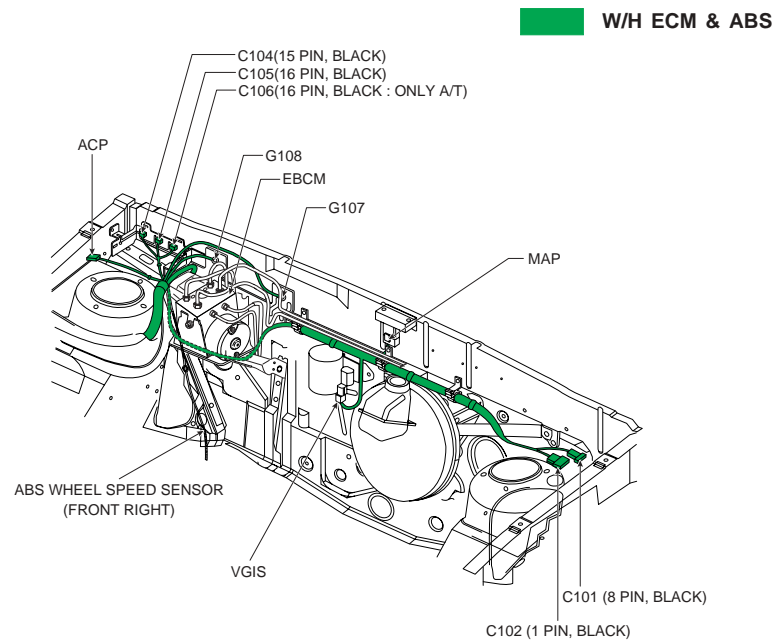

• FLOOR PANEL

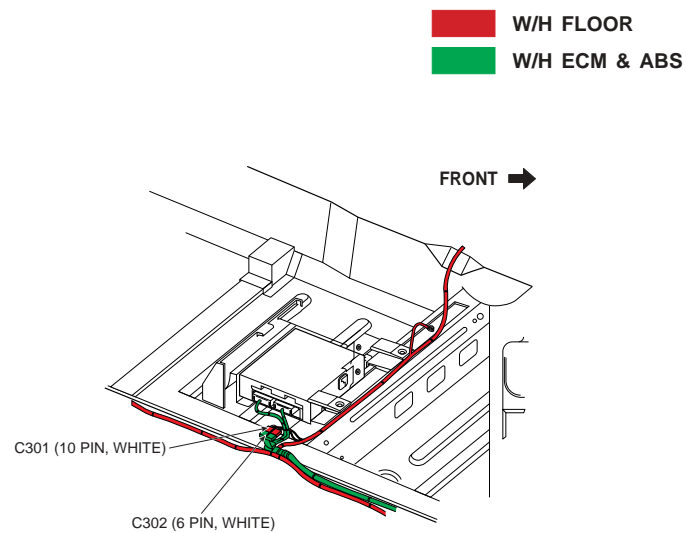

• UNDER BODY

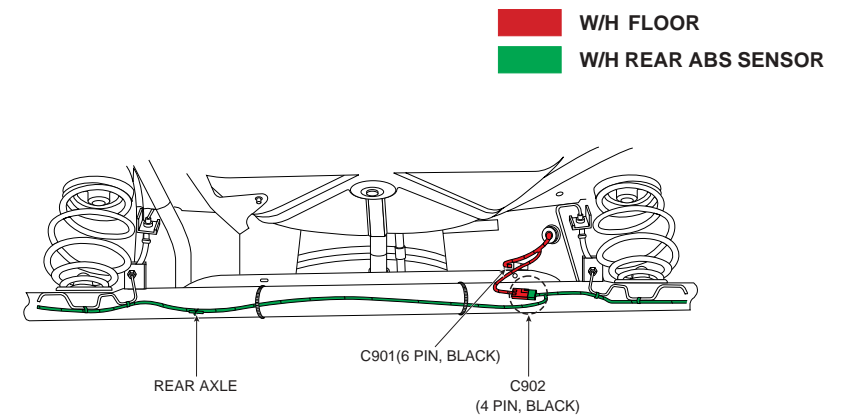

• DOHC ENGINE

